


If the parameter shown in the middle row is or becomes the dominant one, for example, after CUT exchanging the position of the parameters in the display and the equivalent circuit symbol remain unchanged.

The sign **DOMINANT** is displayed in front of the digits in the middle row to indicate that the parameter shown is now the dominant one.

DOMINANT is not displayed if the parameter shown has been selected manually, for example, SER/PAR, Φ/Z , Q/D, or V_X/I_X .

Function and Key Operation

Display

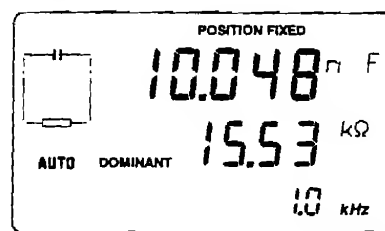

To leave this measuring mode press the **AUTO** key.